

eKEY® App Compatible Phones and Tablets

iBox Keyboxes

Android™

Requirements:

- Phones or tablets with OS 2.1 or newer
- A cellular data plan
- The current eKEY application downloaded to the Android phone or tablet

A Supra® eKEY Fob is required to open the iBox keybox.



Supra eKEY Fob

Some Example Devices:

Google	Nexus™ 7, Nexus One, Nexus S
HTC™	Aria™, Desire, Eris, EVO™ 4G & 3D, Hero™, Incredible 2, Incredible, Sense, Thunderbolt™, Touch 2, and Wildfire™
LG®	Enlighten™, Intuition™, Optimus™, Revolution™, Thrill™, and Vortex™
Motorola™	Atrix 2, Bionic, Droid 2, Droid X, Razr, Razr M
Samsung®	Charge, Epic™, Galaxy S™7, S6, S5, S4, S3, S2, & S, Galaxy Note™ 4, 3, & 2, and Moment

Apple®

Requirements:

- Phones or tablets with iOS 6 or newer
- A cellular data plan
- The current eKEY application downloaded to the Apple phone or tablet

A Supra® eKEY Fob is required to open the iBox keybox.



Supra eKEY Fob

Some Example Devices:

Open a classic iBox with a Supra Fob and your:	
iPhone®	7 Plus, 7, 6s Plus, 6s, 6 Plus, 6, 5s, 5c, & 5, 4s & 4, and 3GS
iPad®	iPad Mini, iPad Pro, 4 th Gen., 3 rd Gen., and 2G

BlackBerry®

Requirements:

- Phones or tablets with OS 5 or newer, except BlackBerry 10
- A cellular data plan
- The current eKEY application downloaded to the BlackBerry phone

A Supra® eKEY Fob is required to open the iBox keybox.



Supra eKEY Fob

Some Example Devices:

BlackBerry	8800 series Bold™ Touch Curve™ Pearl™/Pearl Flip Storm™ Torch™ Tour™
-------------------	----------------------------------------------------------------------------------------

Contact Support at 1-877-699-6787 if you have questions about a specific phone or tablet.

Compatible eKEY App Devices List
[Click Here](#)

www.supraekey.com

