#### **XpressKEY**®

- 1. Tap the arrow.
- 2. Tap **Preferences**.
- Tap Vibrate or Display PIN/Shackle.
- 4. Tap **Done** to exit.

1. Tap the arrow.







#### **XpressKEY**

- 1. Tap the arrow.
- 2. Tap **Preferences**.
- 3. Tap Vibrate or Display PIN/Shackle.
- 4. Tap **Done** to exit.

2. Tap Preferences.







### **XpressKEY**

Tap the arrow.
Tap Preferences.
Tap Vibrate or Display PIN/Shackle.
Tap Done to exit.

3. Tap Vibrate or Display PIN/Shackle.








#### **XpressKEY**

Tap the arrow.
Tap Preferences.
Tap Vibrate or Display PIN/Shackle.
Tap Done to exit.

4. Tap **Done** to exit.

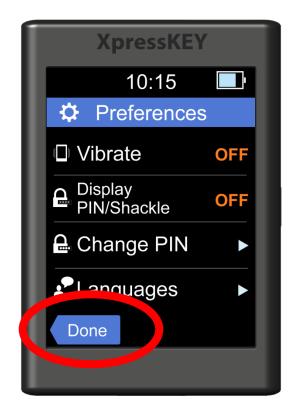





For the latest information, visit us at www.supraekey.com and select the Customer Support tab.



