

How to *Replace a Battery*

XpressKEY®

1. Power OFF the XpressKEY.
2. Remove the back case of the XpressKEY.
3. Take out the old battery.
4. Add the new battery.
5. Snap on the back case.

1. Power OFF the XpressKEY.



How to *Replace a Battery*

XpressKEY

1. Power OFF the XpressKEY.
2. Remove the back case of the XpressKEY.
3. Take out the old battery.
4. Add the new battery.
5. Snap on the back case.

2. Remove the back case of the XpressKEY.



How to *Replace a Battery*

XpressKEY

1. Power OFF the XpressKEY.
2. Remove the back case of the XpressKEY.
3. Take out the old battery.
4. Add the new battery.
5. Snap on the back case.

3. Take out the old battery.



How to *Replace a Battery*

XpressKEY

1. Power OFF the XpressKEY.
2. Remove the back case of the XpressKEY.
3. Take out the old battery.
4. Add the new battery.
5. Snap on the back case.

4. Add the new battery.

Make sure the battery contacts are aligned with the XpressKEY contacts.



How to *Replace a Battery*

XpressKEY

1. Power OFF the XpressKEY.
2. Remove the back case of the XpressKEY.
3. Take out the old battery.
4. Add the new battery.
5. Snap on the back case.

5. Snap on the back case.



For the latest information, visit us at www.supraekey.com and select the **Customer Support** tab.



© 2016 United Technologies Corporation. All rights reserved. Supra is a part of UTC Climate, Controls & Security (CCS), and a unit of United Technologies Corporation. Supra and XpressKEY are registered trademarks of United Technologies Corporation. Other brand and product names are or may be the trademarks of, and are used to identify products or services of, their respective owners.

